


Bead Brite Research

*Technical Bulletin
And
Starting Formulations*

*Creating Custom Effect Finishes With
Bead Brite Additives*

Cargo Blue Containers

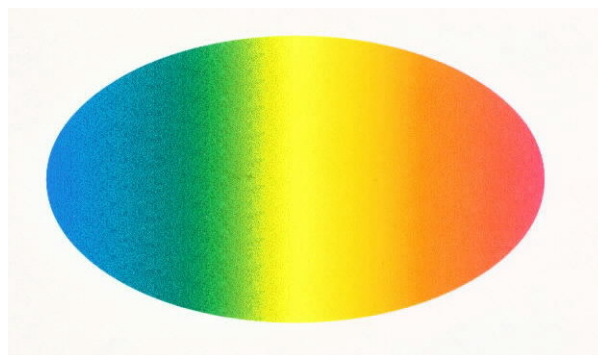

CARGO BLUE CONTAINER SPRAYOUTS

BBC

7400	200.0
7132	60.0
7110	20.2
7118	10.0
7023	90.0
1-13 MIRROR 4 %	16.0
1-45 MIRROR 2 %	8.0

BBC1

7400	200.0
7132	60.0
7110	30.2
7118	10.0
7111	60.0
7023	90.0
1-13 MIRROR 4%	16.0
1-45 MIRROR 2%	8.0

BBC2

7400	200.0
7132	60.0
7110	35.0
7118	64.0
7111	70.0
7023	110.0
1-13 MIRROR 6%	32.5
1-45 MIRROR 3%	16.2

BBC3

7400	200.0
7132	60.0
7110	37.0
7118	64.0
7111	70.0
7023	110.0
1-13 MIRRORS 6%	32.5
1-45 MIRRORS 3%	16.2

BBC4

7400	200.0
7132	60.0
7110	40.2
7118	64.0
7111	70.0
7023	110.0
1-13 MIRRORS 6%	32.5
1-45 MIRRORS 3%	16.2